



MUR

felt wall





MOUNTING OPTIONS

TOOLS REQUIRED



Cutting tool



Steel straightedge



Drill




Hole saw



Construction adhesive

DRY FIT

Before applying adhesive, dry fit the first panel to the wall.

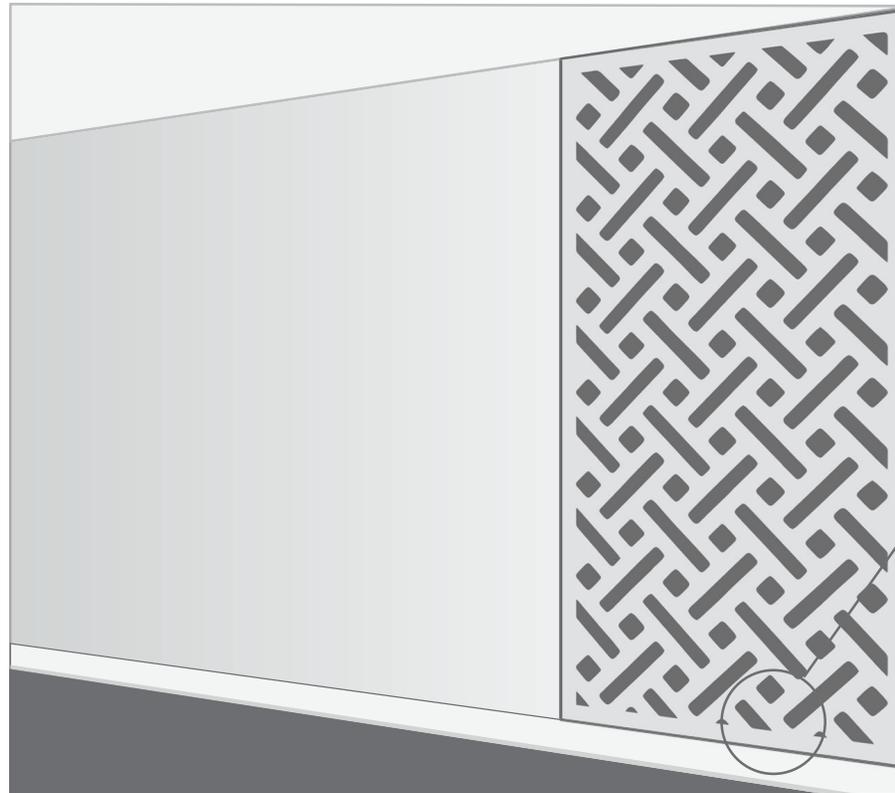


Note: to avoid irregularity, we recommend applying to the top of a baseboard.



MOUNTING OPTIONS

APPLY CONSTRUCTION ADHESIVE (RECOMMENDED)

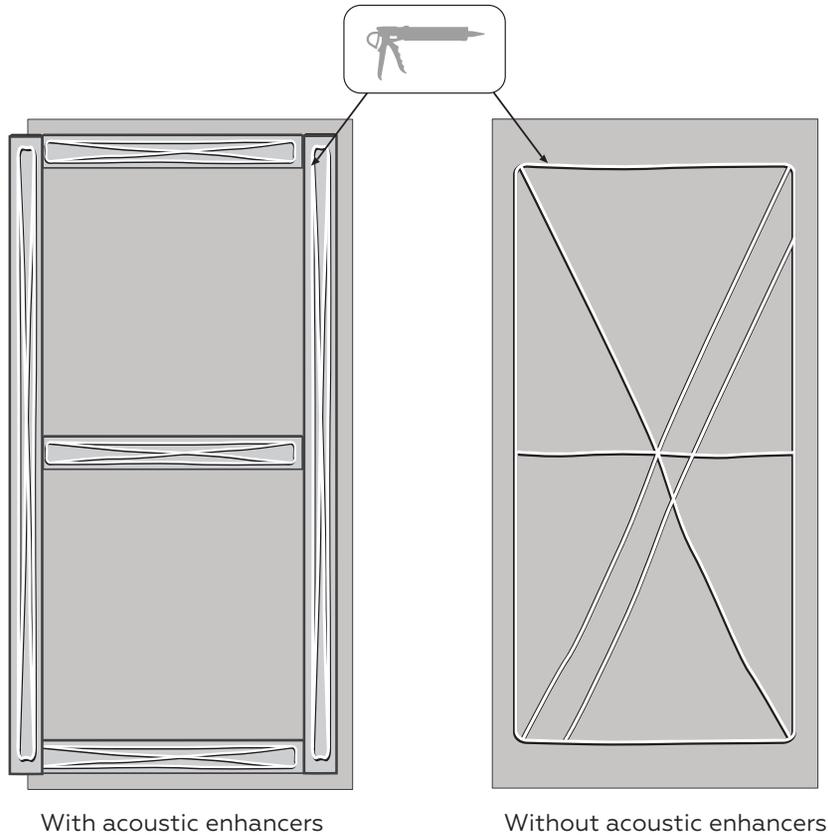

HOOK Z-CLIPS (ALTERNATIVE)

Determine the desired position of z-clips and screw them into the back of the panel.

