



INSTALLATION GUIDELINES ARETE WALL-MOUNTED PANELS

Arete Acoustic Felt Wall Tiles

Arete Acoustic Wall Panels consist of two components: a flat acoustic felt backer panel, which should be mounted to the wall using included drywall screws, and ridges, which will fold and mount via tabs to slots in the backer panel. The ridges will conceal the drywall screws.

Installers should rely upon their own professional experience and understanding of their unique requirements to ensure a successful install.

Tools Needed

Level



Box Cutter




Drill



Included Needed

Backer panel

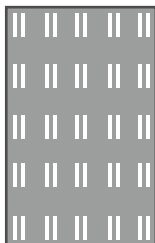

Slats



Drywall screws



INSTALLATION

1. Arete will arrive disassembled. Each Arete wall panel will consist of a flat wall panel and an appropriate number of flattened ridge panels.
2. Locate hardware, including drywall screws.
3. Using a level, mount the Arete panel(s) into the appropriate spot using the drywall screws (typical install requires one drywall screw every 2', with no less than 4 per Arete panel). The screws should be drilled between the slots so that when the ridges are installed, they will conceal the drywall screws. The screws should also be drilled through the acoustic enhancer on the wall side of the backer panel.
4. Once the back panel is mounted to the wall, install the ridges with the tabs pointed downward in the slots.

