



INSTALLATION GUIDELINES PRISM WALL-MOUNTED PANELS

Prism Acoustic Felt Wall Panels

Prism Acoustic Wall Panels are easy to install. Each panel should be leveled and mounted to the wall using included construction adhesive.

Installers should rely upon their own professional experience and understanding of their unique requirements to ensure a successful install.

Tools Needed

Level




Box Cutter



Included

Prism Backer Panel

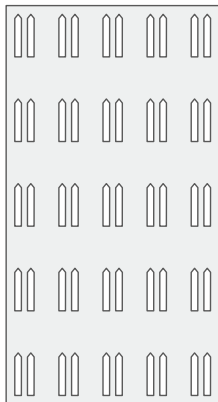

Slats



Construction Adhesive



INSTALLATION

1. Ensure that the arrow-shaped slots are pointing upward before installation.
2. Apply adhesive to the back of the panels and hold to wall for 30 - 60 seconds.
3. Once the back panel is mounted to the wall, install the slats with the tabs pointed downward in the slots.

