



FIN MURAL

felt wall





FIN MURAL WALL-MOUNTED PANELS

Fin Mural Acoustic Wall Panels consist of two components: a flat acoustic felt backer panel, which should be mounted to the wall using included screws and slats, which will mount via tabs to slots in the backer panel. The slats will conceal the drywall screws.

Installers should rely upon their own professional experience and understanding of their unique requirements to ensure a successful install.

STANDARD DIMENSIONS

Single Panel	23"W x 119"H
Felt Thickness	2"

TOOLS REQUIRED



Cutting tool



Steel straightedge




Drill



Screws

DRY FIT

Before screwing in backer, dry fit the first panel to the wall.

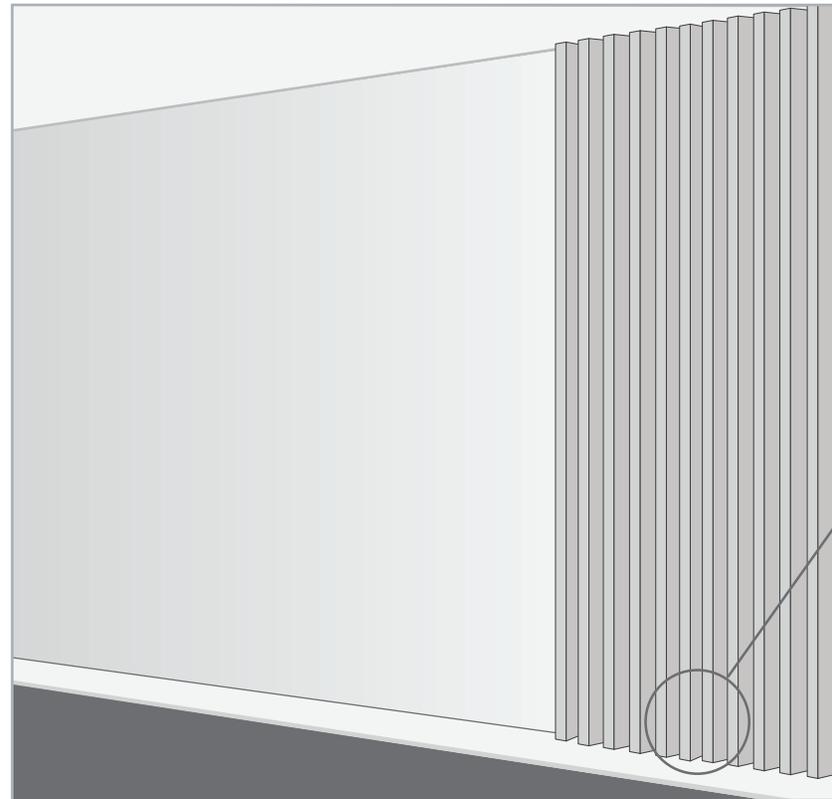


Note: to avoid irregularity, we recommend applying to the top of a baseboard.



INSTALL OVERVIEW

MOUNTING FIN MURAL

Screw the backer panel and enhancers to the wall, then hook the Fin Mural slats into the slots.

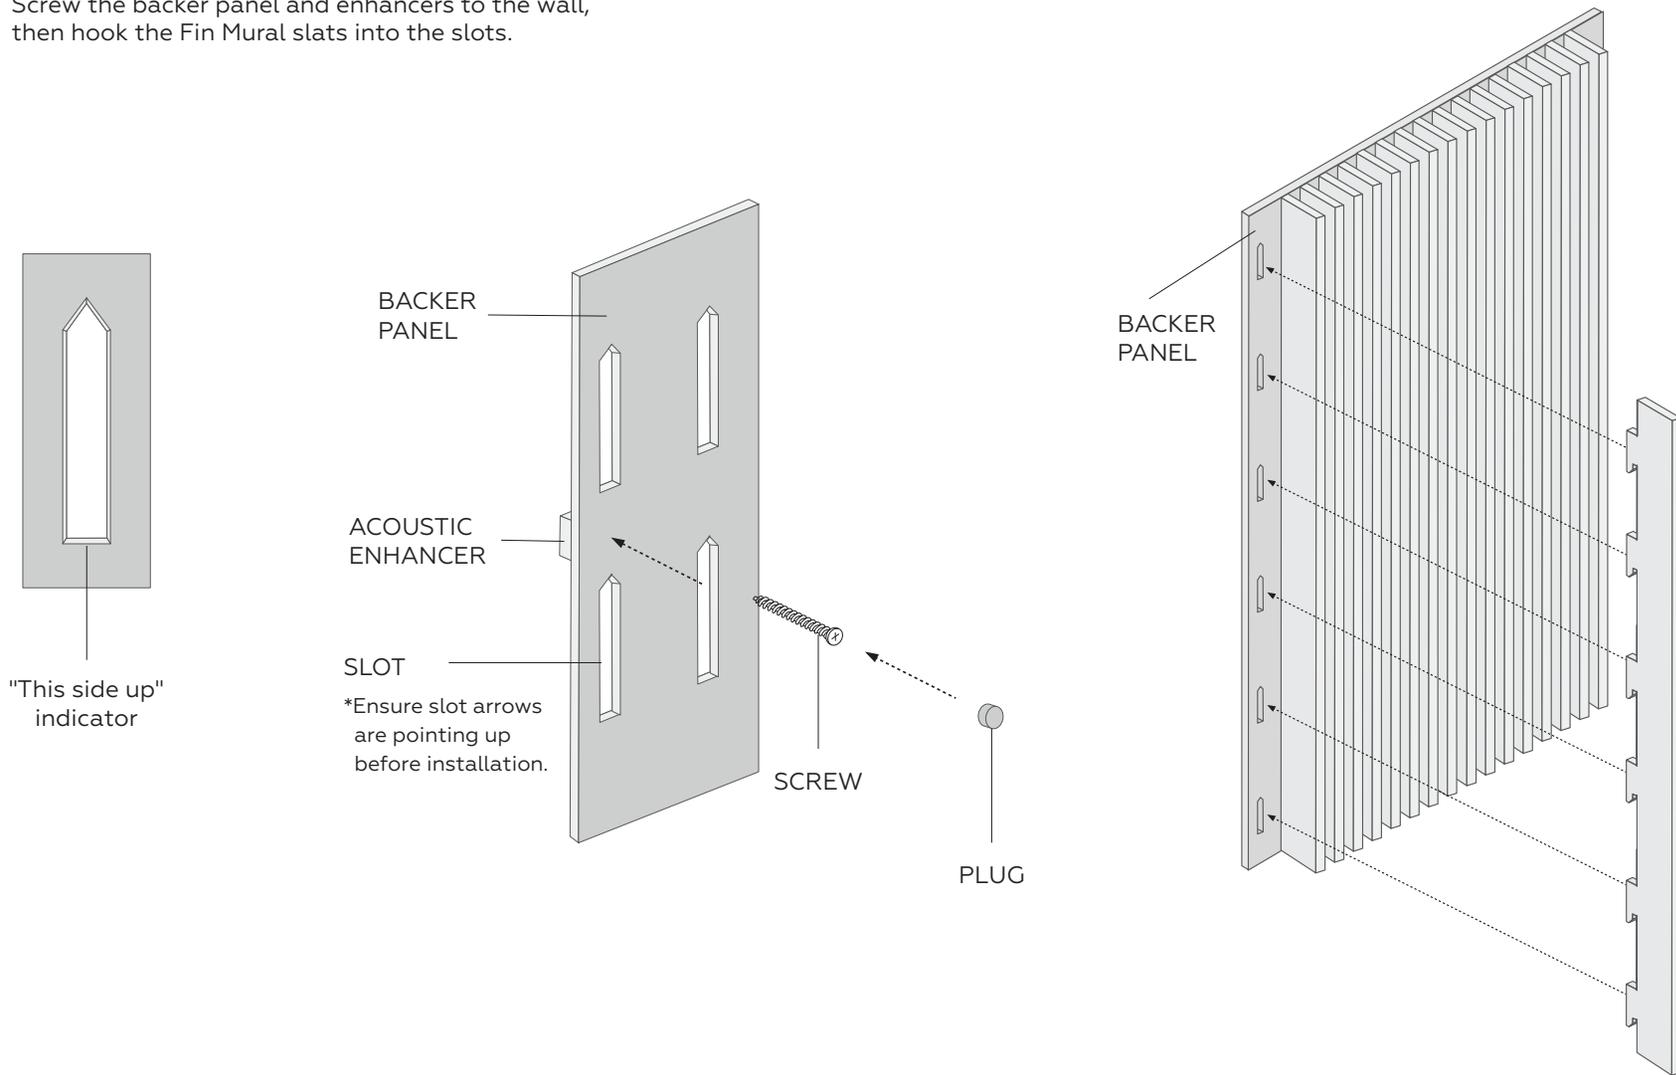




INSTALLING FIN MURAL

Install Fin Mural in just two steps. See below.

INSTALLING BACKER PANEL

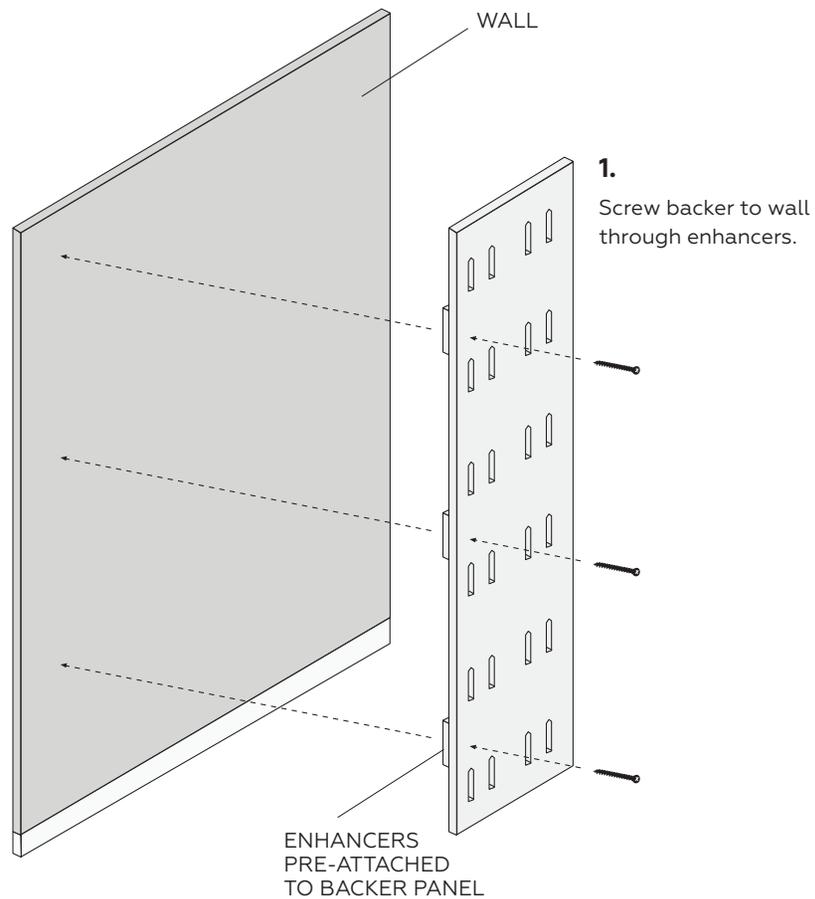

INSTALLING SLATS

