



INSTALLATION GUIDELINES

FIN MURAL WALL-MOUNTED PANELS

Fin Mural Acoustic Felt Wall Panels

Fin Mural Acoustic Wall Panels consist of two components: a flat acoustic felt backer panel, which should be mounted to the wall using included construction adhesive, and slats, which mount via tabs to slots in the backer panel. The ridges will conceal the drywall screws.

Installers should rely upon their own professional experience and understanding of their unique requirements to ensure a successful install.

Tools Needed

Level




Box Cutter



Included

Fin Backer Panel

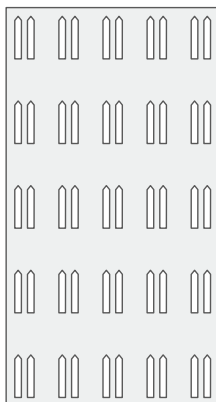

Slats



Construction Adhesive



INSTALLATION

1. Ensure that the arrow-shaped slots are pointing upward before installation.
2. Apply adhesive to the back of the panels and hold to wall for 30 - 60 seconds.
3. Once the back panel is mounted to the wall, install the slats with the tabs pointed downward in the slots.

